



SUZUKI PHILIPPINES INCORPORATED

**ACCESS**

Item	Interval	1000	4000	8000	12000	16000	20000
	km Months	1	4	8	12	16	24
Air cleaner element	Polyurethane foam	I	I	I	I	I	I
	Clean every 3,000 km						
	Non woven element	-	I	I	R	I	I
	Replace every 12000 km						
*Exhaust pipe bolts and muffler mounting bolts		T	T	T	T	T	T
*Valve clearance		I	I	I	I	I	I
Sparkplug		-	I	I	R	I	I
	Replace every 10,000 km						
Fuel Hose		-	I	I	I	I	I
	*Replace every 4 years						
*Evaporative emission control system		-	-	I	-	I	-
Engine oil		R	R	R	R	R	R
Oil strainer		I	-	I	-	I	-
*Gear Oil		-	-	R	-	R	-
Throttle cable play		I	I	I	I	I	I
*Idle Speed		I	I	I	I	I	I
*Drive V-belt		I	I	I	I	I	R
	Replace every 20,000 km or if necessary						
*Clutch shoe		-	I	I	I	I	I
*Brakes		I	I	I	I	I	I
	Replace if necessary						
Brake hose		I	I	I	I	I	I
	*Replace every 4 years						
Brake fluid		I	I	I	I	I	R
	*Replace every 2 years						
Tyres		I	I	I	I	I	I
*Steering		I	-	I	I	-	I
*Front fork		-	I	-	I	-	I
*Rear suspension		-	-	I	-	-	I
*Chassis nuts and bolts		T	T	T	T	T	T
Lubrication		Lubricate every 1000km					

**LEGEND:**

*I = Inspect and clean, adjust or lubricate as necessary*

*R = Replace*

*T = Tighten*

*\* = Important parts to check*