



SUZUKI PHILIPPINES INCORPORATED

RAIDER R150 BLADE & RAIDER PRO

Item	Interval	1000	4000	8000	12000	16000	20000
	km Months	1	4	8	12	16	24
Air cleaner element		-			R		
	Replace every 12000 km						
*Exhaust pipe bolts and muffler mounting bolts		T	T	T	T	T	T
*Valve clearance							
Sparkplug		-			R		
	Replace every 10,000 km						
Fuel Hose		-					
	*Replace every 4 years						
Engine oil		R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R
Throttle cable play							
Idle Speed							
*PAIR (air) supply system		-					
*Engine coolant	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	Replace every 4 years					
	"SUZUKI SUPER LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	Replace every 2 years					
Radiator hose		-					
Clutch cable play		-					
Drive chain							
	Clean and lubricate every 1000 km						
*Brakes							
	Replace if necessary						
Brake hose							
	*Replace every 4 years						
Brake fluid							R
	*Replace every 2 years						
Tires							
*Steering			-			-	
*Front fork		-		-		-	
*Rear suspension		-	-		-	-	
*Chassis nuts and bolts		T	T	T	T	T	T
Lubrication		Lubricate every 1000km					

LEGEND:

I = Inspect and clean, adjust or lubricate as necessary

R = Replace

T = Tighten

** = Important parts to check*