



By Your Side

DR160

Item	Interval	Km	1,000	3,000	6000	9000	12000	
	Month		1	4	8	12	16	
Battery / Fuse			-	I	I	-	I	
Air filter			-	C	-	-	C	
Clean every 18 months every 12,000 km								
Exhaust pipe bolts and muffler bolts			I	I	I	-	I	
Cylinder head bolts			I	I	I	-	I	
Valve clearance(when cold)			I	I	I	-	I	
Spark plug			I	I	I	-	R	
Replace every 10,000 km								
Engine oil			R	R	R	R	R	
Oil sump filter and oil centrifugal filter			Clean every 18 months 12,000 km					
Clutch cable play			I	I	I	-	I	
Throttle body				C	-	C	-	
Idle speed			I	I	I	-	I	
Throttle cable			I	I	I	-	I	
Fuel hose			I	I	I	-	I	
Replace every 10 years								
Evaporative emission control system			I	I	I	-	I	
Drive chain			Inspect,Clean & lubricate for every 1,000 km					
Brakes	Brakes		I	I	I	-	I	
	Brake hose		I	I	I	-	I	
	Replace every 4 years							
	Brake fluid		Inspect every 3,000 km, replace every 2 years					
Tire			I	I	I	-	I	
Steering			I	I	I	-	I	
Front and rear shock absorbers			-	I	-	I	-	
Lamp and signal			I	I	I	-	I	
Chassis bolts and nuts			I	I	I	-	I	
Throttle cable			-	-	L	-	-	
Throttle grip			-	-	-	L	-	
Clutch cable			-	-	L	-	-	
Gearshift lever pivot			-	-	L	-	-	
Steering stem bearings			Grease every 2 years 20 000 km					
Drive chain			Lubricate every 1 000 km					
Rear brake pedal pivot			-	-	L	-	-	
Swing arm bearings and seal			Grease every 2 years 20 000 km					
Clutch lever holder			-	-	L	-	-	
Brake lever holder and brake fluid cylinder piston end face			-	-	L	-	-	
Side stand and spring hook			-	-	L	-	-	
Contact area between the deflector and clutch cable			-	-	L	-	-	

Legend:  
 C- Clean  
 R- Replace  
 L- Lubricate  
 I- Inspect