



By Your Side

V-STROM160

Item	Interval	Km	1,000	3,000	6000	9000	12000
	Month		1	4	8	12	16
Battery / Fuse			-	I	I	-	I
Air filter			-	C	-	-	C
Clean every 18 months every 12,000 km							
Exhaust pipe bolts and muffler bolts			I	I	I	-	I
Cylinder head bolts			I	I	I	-	I
Valve clearance(when cold)			I	I	I	-	I
Spark plug			I	I	I	-	R
Replace every 10,000 km							
Engine oil			R	R	R	R	R
Oil sump filter and oil centrifugal filter			Clean every 18 months 12,000 km				
Clutch cable play			I	I	I	-	I
Throttle body				C	-	C	-
Idle speed			I	I	I	-	I
Throttle cable			I	I	I	-	I
Fuel hose			I	I	I	-	I
Replace every 10 years							
Evaporative emission control system			I	I	I	-	I
Drive chain			Inspect,Clean & lubricate for every 1,000 km				
Brakes	Brakes		I	I	I	-	I
	Brake hose		I	I	I	-	I
	Brake fluid		Replace every 4 years				
Inspect every 3,000 km, replace every 2 years							
Tire			I	I	I	-	I
Steering			I	I	I	-	I
Front and rear shock absorbers			-	I	-	I	-
Lamp and signal			I	I	I	-	I
Chassis bolts and nuts			I	I	I	-	I
Throttle cable			-	-	L	-	-
Throttle grip			-	-	-	L	-
Clutch cable			-	-	L	-	-
Gearshift lever pivot			-	-	L	-	-
Steering stem bearings			Grease every 2 years 20 000 km				
Drive chain			Lubricate every 1 000 km				
Rear brake pedal pivot			-	-	L	-	-
Swing arm bearings and seal			Grease every 2 years 20 000 km				
Clutch lever holder			-	-	L	-	-
Brake lever holder and brake fluid cylinder piston end face			-	-	L	-	-
Main stand and spring hook			-	-	L	-	-
Side stand and spring hook			-	-	L	-	-
Contact area between the deflector and clutch cable			-	-	L	-	-

Legend:  
 C- Clean  
 R- Replace  
 L- Lubricate  
 I- Inspect